


RX Multi 433-868MHZ

1. RX Multi Picture

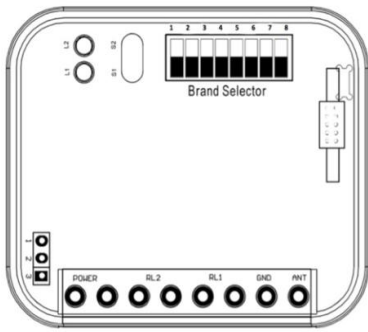

2. Brand selector

With 8 bits dip switch, the user can make difference combination for different remote brands. The brands selection show as below table

3. Learn Button and LED

In RX---Multi receiver, there are 2 independent channels. Each channel has independent learn button S1, S2 and L1,L2.

4. Power Input Selector

This receiver can work at AC/DC 12V~30V. However, it's better to change the PIS according to the power input. If the input is great than 24V, shorten pin 2&3; shorten 1&2 if input less than 24V

5. Exchangeable Memory Card

The memory card can be removed from board for read, copy and backup.

6. Programming procedure:

1. First, select the correct brand for remote that will be entry (by dip switch).
2. Press the learn button, LED turns on. Press the button on the remote, the LED S1/S2 flashes 4 times, this remote button entry into the RX-MULTI successfully.
3. Repeat step 2 for another button.
4. Both channels work the same.

Erase all data in memory card:

Pressing and holding either learn button, the LED start flash. Keep holds pressing this button until the LED turn off. All data in the memory card will be erased permanently.

Notice: Be carefully for erasing all data in the memory card. The data will be erased permanently and cannot be recovered.

ITEM	SLECTION SWITCH	BRAND	FREQ	NOTES
1		NICE FLORS	433.92MHZ	
2		MARANTEC	433.92MHZ	
		MARANTEC	868.3Mhz	

3		Universal Fixed Code	433.92MHZ	Fixed Code
4		FAAC SLH ROLLING CODE	433.92MHZ	
5		Liftmaster	310MHZ	
6		Liftmaster	390MHZ	
7		Liftmaster	433.92MHZ	
8		Universal Rolling Open Code	433.92MHZ	Open Code
9		Universal Rolling Open Code	315MHZ	Open Code
10		Universal Rolling Open Code ASK	318MHZ	Open Code
11		Universal Fixed Code	300MHZ	Fixed Code
12		Universal Fixed Code	310MHZ	Fixed Code
13		Universal Fixed Code	315MHZ	Fixed Code

14		Universal Fixed Code	318MHZ	Fixed Code
15		Universal Fixed Code	330MHZ	Fixed Code
16		Universal Fixed Code	390MHZ	Fixed Code
17		Liftmaster Rolling Code Billioncode	390MHZ	
18		Liftmaster Rolling Code Billioncode	315MHZ	
19		Hormann Marantec Berner	868MHZ	
20		FAAC SLH	868MHZ	
21		PRASTEL	433.92MHZ	
22		SOMMER	434.4Mhz	
23		SOMMER	868.8Mhz	
24		Liftmaster Rolling Code	868MHZ	

25		CLEMSA Mastercode	443.92 Mhz	
26		DITEC	315MHZ	
27		DITEC	390MHZ	
28		DITEC	433.92MHZ	
29		V2	315MHZ	
30		V2	390MHZ	
31		V2	433.92MHZ	
32		Aprimatic Rolling Code	433.92MHZ	
33		Aprimatic Rolling Code	868.3Mhz	
34		JCM GO Rolling Code	868.3Mhz	
35		JCM TECH Rolling Code	868.3Mhz	

36	<p>1 2 3 4 5 6 7 8</p>	P.N.C Rolling Code	868.3Mhz	
37	<p>1 2 3 4 5 6 7 8</p>	MAP Rolling Code	868.3Mhz	
38	<p>1 2 3 4 5 6 7 8</p>	FORSA	868.3Mhz	
39	<p>1 2 3 4 5 6 7 8</p>	ALMA	868.3Mhz	
40	345 UP	DMIL	868.3Mhz	
41	3458 UP	CEA	868.3Mhz	
43	3457 UP	Roper	868.3Mhz	
44	4578 UP	Universal Rolling Code FSK	868MHZ	Open Code
45	5678 UP	Universal Rolling Code ASK	868MHZ	Open Code